
Filmwerkplaats Retro Scanner

Do NOT go on internet with the scanner (for instance to upgrade) We will lose the program !!!!

- Turn on the computer with the green button on the top
- Choose “fwp”
- password: doka
- Open “R” down under from the menu bar, or from the icon onto the the desktop.
- Open an existing album, or create a new album
- You can skip the year. We’re stuck in 1974.
- Load your film on the left side. Take up spool is on the right.
  Perforation is closest to the wall.

Closing Knob for the left spool is counterclockwise

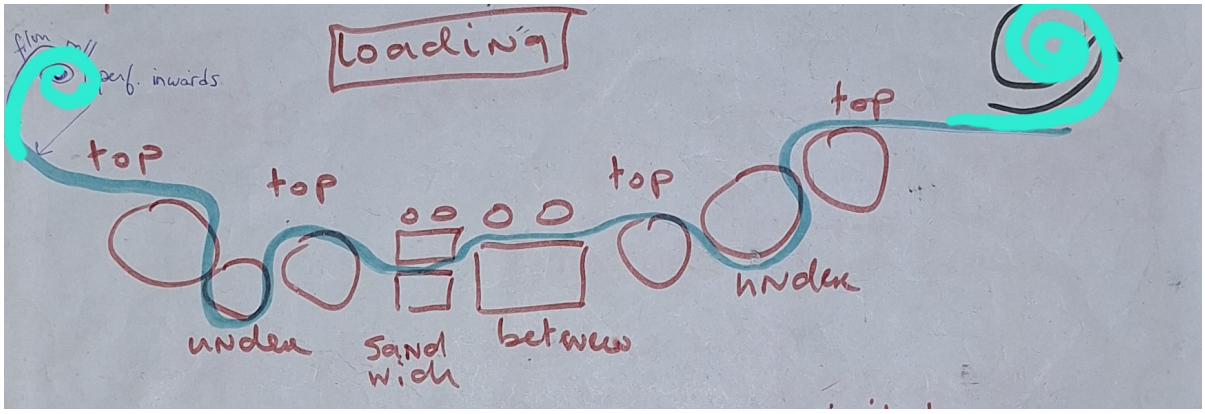

-**Set up**

Put the gain on “0” (zero) in stead of 5, to skip the digital automatic colour correction.

-**START** turn the “forward”-switch on the panel to activate the light and transport.

-Adjust the exposure with the turning knob

-If necessary: adjust the sensor with the turning knob

switch off the “forward”button, Then press **STOP** on the program**.**

-**EXPORT** , -> a list appears, choose your file(s).

Doubleclick on the blue bar in the cell, then choose from the menus

-> HD movie-1080p-speed 24 fps-CC no or HD image sequence 1080p, or whatever you prefer.

-External harddrive or usb in one of the empty USB-ports

Press **EXPORT**

--Do NOT rewind the film on the scanner, just take off the reels and rewind your film on the hand rewind table.

-Do NOT forget to delete your files after using the scanner!

EXTRA INFORMATION:

-Backside of the retro: -choose **“fast”** or “slow”

- choose **“movie”** or “slides”

Focus: adjust the lens

Adjustment of sprocket line

30 meter of 16mm film = +- 9 GB at 1080p